

PART 2 : ELECTRICAL SECTION

EXHAUST FAN

EXHAUST FAN

Note : The "MASTER" switch must be ON, the voltage of the batteries must be over 10,5V and the engine must be running to activate the exhaust fan.



The exhaust fan is located on the left wall, behind medical cabinet, on the rear side.

The exhaust fan in the patient compartment has three (3) different speeds : LOW, MEDIUM and HIGH.

Note : The exhaust fan is automatically activated in low speed mode as soon the engine is running.

OPERATION

Front console :

On the front interface control, press on the "REAR EXHAUST FAN" button to activate the exhaust fan in medium speed mode. The indicator light on the button will flash. Press the button again to increase the speed of the exhaust fan (high speed mode). The indicator light on the button comes on. Press the button again to change the speed of the exhaust fan to low speed mode.

Rear console :

Push the "REAR EXHAUST FAN" switch up to activate the exhaust fan in medium speed mode. The light on the switch will flash. Push the switch up again to increase the speed of the exhaust fan (high speed mode). The indicator light on the switch comes on. Push the switch down to decrease the speed of the exhaust fan.

Auxiliary rear console :

Push the "REAR EXHAUST FAN" switch up to activate the exhaust fan in medium speed mode. The light on the switch will flash. Push the switch up again to increase the speed of the exhaust fan (high speed mode). The indicator light on the switch comes on. Push the switch down to decrease the speed of the exhaust fan.

PART 2 : ELECTRICAL SECTION

EXHAUST FAN

MAINTENANCE

To have access to the exhaust fan, follow these operations :



The exhaust fan is located at the rear end of the medical cabinet.



Lift up the adjustable shelf.



Remove the access trap.



The exhaust fan is now accessible.