 <b>BC Ambulance Service</b> BC Emergency Health Services	<b>Crestline Re-mount Ford Ambulance Siren Re-locate</b>	July 6, 2018 Page 1 of 2
<b>AMBULANCE TYPE:</b>	Crestline Ford Ambulance	
<b>UNITS AFFECTED:</b>	Crestline Re-mount Ford Ambulance	

**ISSUE:** The Crestline re-mount Ford ambulance siren sound levels inside the cab are higher due to the sirens being mounted inside the engine compartment.


**ACTION:** Install the supplied sirens onto the front bumper.

**LABOUR TIME:** 0.8 hrs.    **BILL TO:** BC Ambulance    **Labour Code:** GMOSRC


**SERVICE PROCEDURE:**

- 1 Using the siren mount bracket as a template, align the siren speakers evenly between the drive/fog lights similar to the picture below. (Some ambulances may have the Hella 6" round driving lights)
- 2 Drill the appropriate size bolt holes.
- 3 Supply appropriate bolts, washers, and lock washers, and attach the siren brackets to the bumper.
- 4 Install the siren speakers to the mount brackets with the supplied bolts and washers.



 <b>BC Ambulance Service</b> BC Emergency Health Services	<b>Crestline Re-mount Ford Ambulance Siren Re-locate</b>	July 6, 2018 Page 2 of 2
<b>AMBULANCE TYPE:</b>	Crestline Ford Ambulance	
<b>UNITS AFFECTED:</b>	Crestline Re-mount Ford Ambulance	

- 5 Locate the siren test point wire harnesses in the left front corner of the engine compartment.

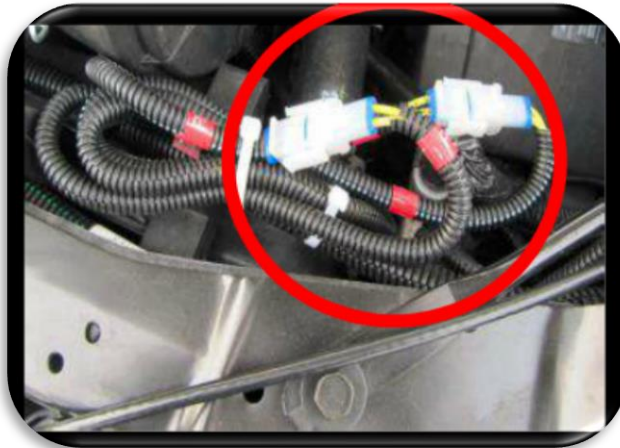

- 6 Unplug the siren test point plugs and connect the supplied wire harnesses to the siren amp side of the test point harness. (Leave the original sirens in place and unplugged – use electrical tape to cover the unplugged connectors).
- 7 Neatly route the new wire harnesses down through the radiator support and grill to the sirens mounted on the front bumper. (Use zap straps if necessary to secure the harnesses).
- 8 Connect the wire harnesses to the siren speakers mounted on the front bumper (Be sure the right harness is connected to the right speaker – left to left).
- 9 Test the siren operation.