



AMBULANCE TYPE:

Crestline Dual Stretcher Ambulances

UNITS AFFECTED:

Crestline Dual Stretcher Ambulances Remounted and prior to 62900

ISSUE: The Crestline dual stretcher remount ambulances and ambulances produced prior to unit 62900 were not up fitted with the cargo net anchor plates

ACTION: Install the cargo net anchor plates

SERVICE PROCEDURE:

Labour Time: 1.0 hr

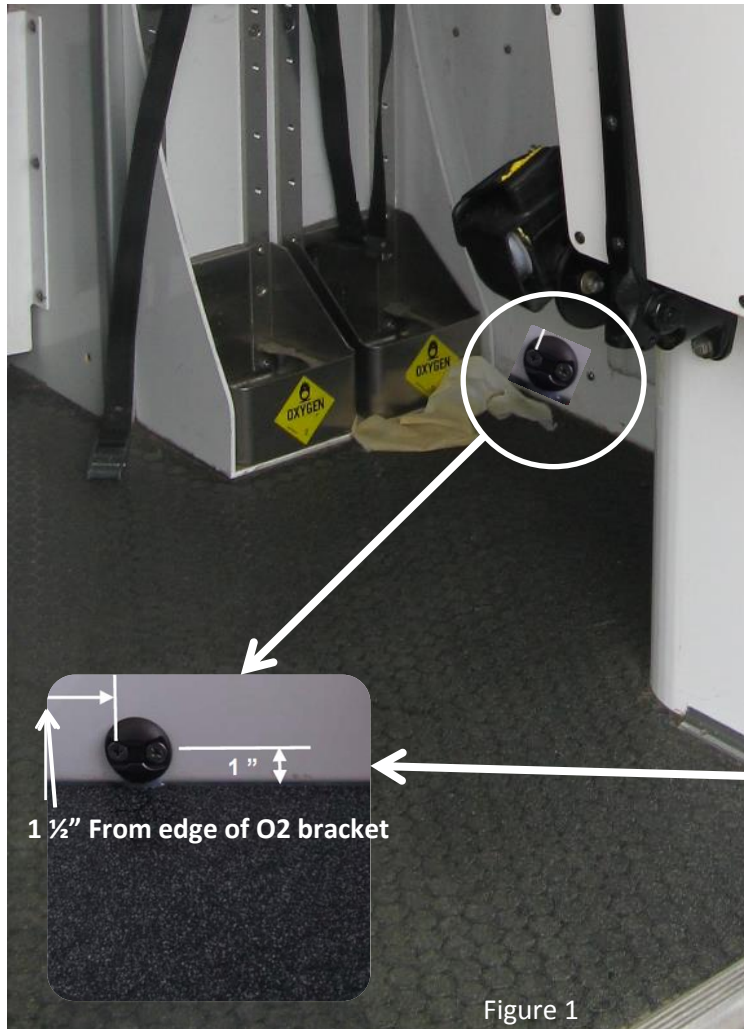


Figure 1

- 1) Use the supplied anchor plate as a template to mark holes.
- 2) Before you drill, check the back side of the panel for accessibility to install the mounting nuts and washers. If needed, move the plate to allow for the nuts and washers to be installed.
- 3) Drill the holes using the appropriate sized drill bit (*be careful not to drill into wiring, hoses, fire extinguisher, battery etc...*) and install the mounting bolts, washers and nuts.

Note: acorn nuts should be used on the bulkhead (figure 1) and the seat pedestal (figure 2) to prevent gear from catching the exposed threads.



Crestline Dual Stretcher Cargo Net Anchors

September 2, 2016
Page 2 of 2

AMBULANCE TYPE:

Crestline Dual Stretcher Ambulances

UNITS AFFECTED:

Crestline Dual Stretcher Ambulances Remounted and prior to 62900

