



BC Ambulance Service  
BC Emergency Health Services

## 148-15 HAND SANITIZER DISPENSOR INSTALLATION

February 22, 2016  
Page 1 of 1

AMBULANCE TYPE: CRESTLINE & DEMERS


UNITS AFFECTED: 62800 AND UP

**ISSUE:** TO REDUCE THE TRANSFER OF INFECTIOUS GERMS; HAND SANITIZER DISPENSERS WILL BE INSTALLED IN THE REAR OF AMBULANCES.

**ACTION:** INSTALL HAND SANITIZER DISPENSOR IN DESIGNATED LOCATION.

**SERVICE PROCEDURE:** Installation is identical for all Crestline & Demers design Ambulances.

1. Clean wall where dispenser attaches with alcohol wipes provided
2. Drill 1/8<sup>th</sup> inch hole 6 1/2" inches from vertical trim edge and 1 3/4" down from horizontal trim edge.
3. Peel tape backing off rear of dispenser and install using provided screw as per picture.

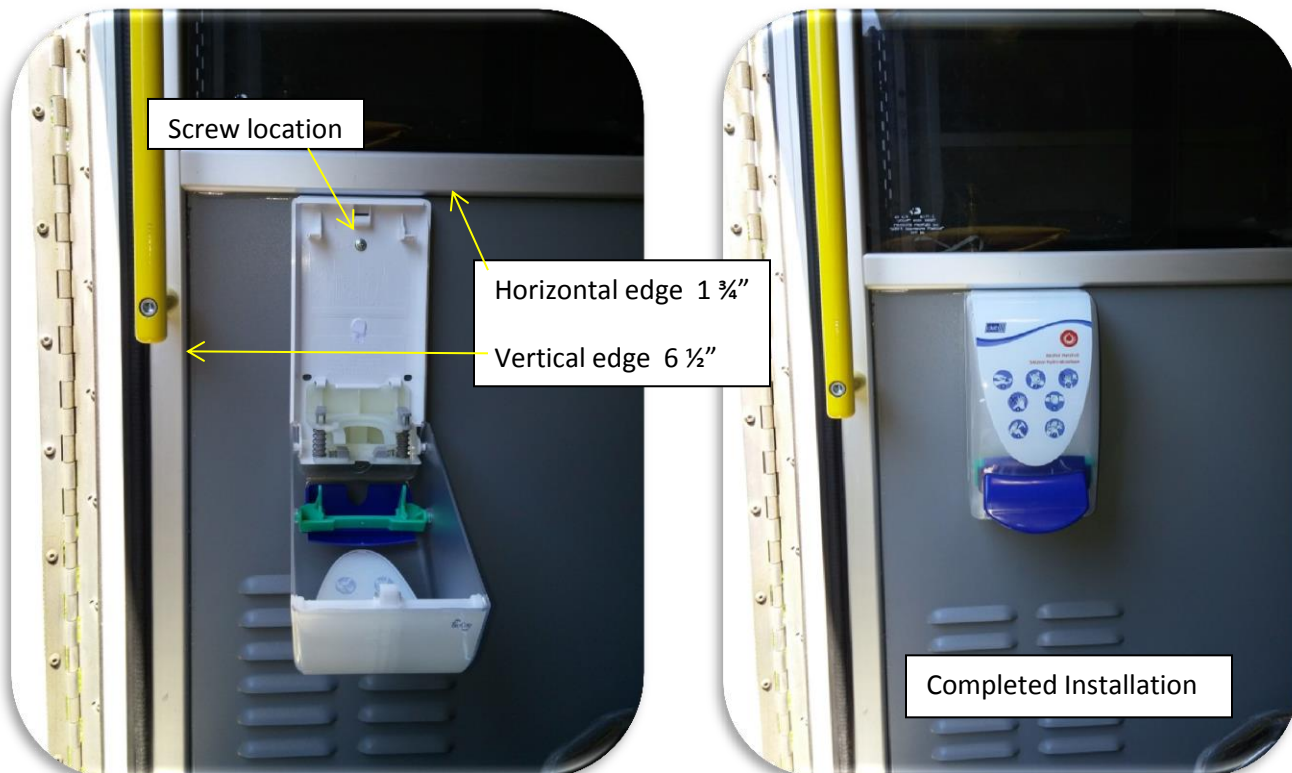

Please code this modification on your invoice as: GMOSD

Labour Time: .2 Hour

BC Ambulance Service, Fleet Operations  
Block C, 2261 Keating X Road

1 877 652-7465  
Fax: 250 952-0275