


Re-program 4 button remote key fob

- Locate the yellow wire in the harness at Keyless Entry control module in electrical compartment.
- Pull the yellow wire out and bare the end.
- Momentarily touch the yellow wire twice to a 12 volt source, then hold to the power source a 3rd time.
- Press the black button that is wrapped up in the harness at the control module.
- The vehicle door locks will cycle.
- Press one button on each of the remote key fobs, one fob at a time (note: all of the key fobs must be re-programmed).
- Remove the yellow wire from the 12 volt power source.
- The door locks will cycle.
- Try all key fobs to confirm the re-program

Wiring Diagram

SYSTEM WIRING DIAGRAM

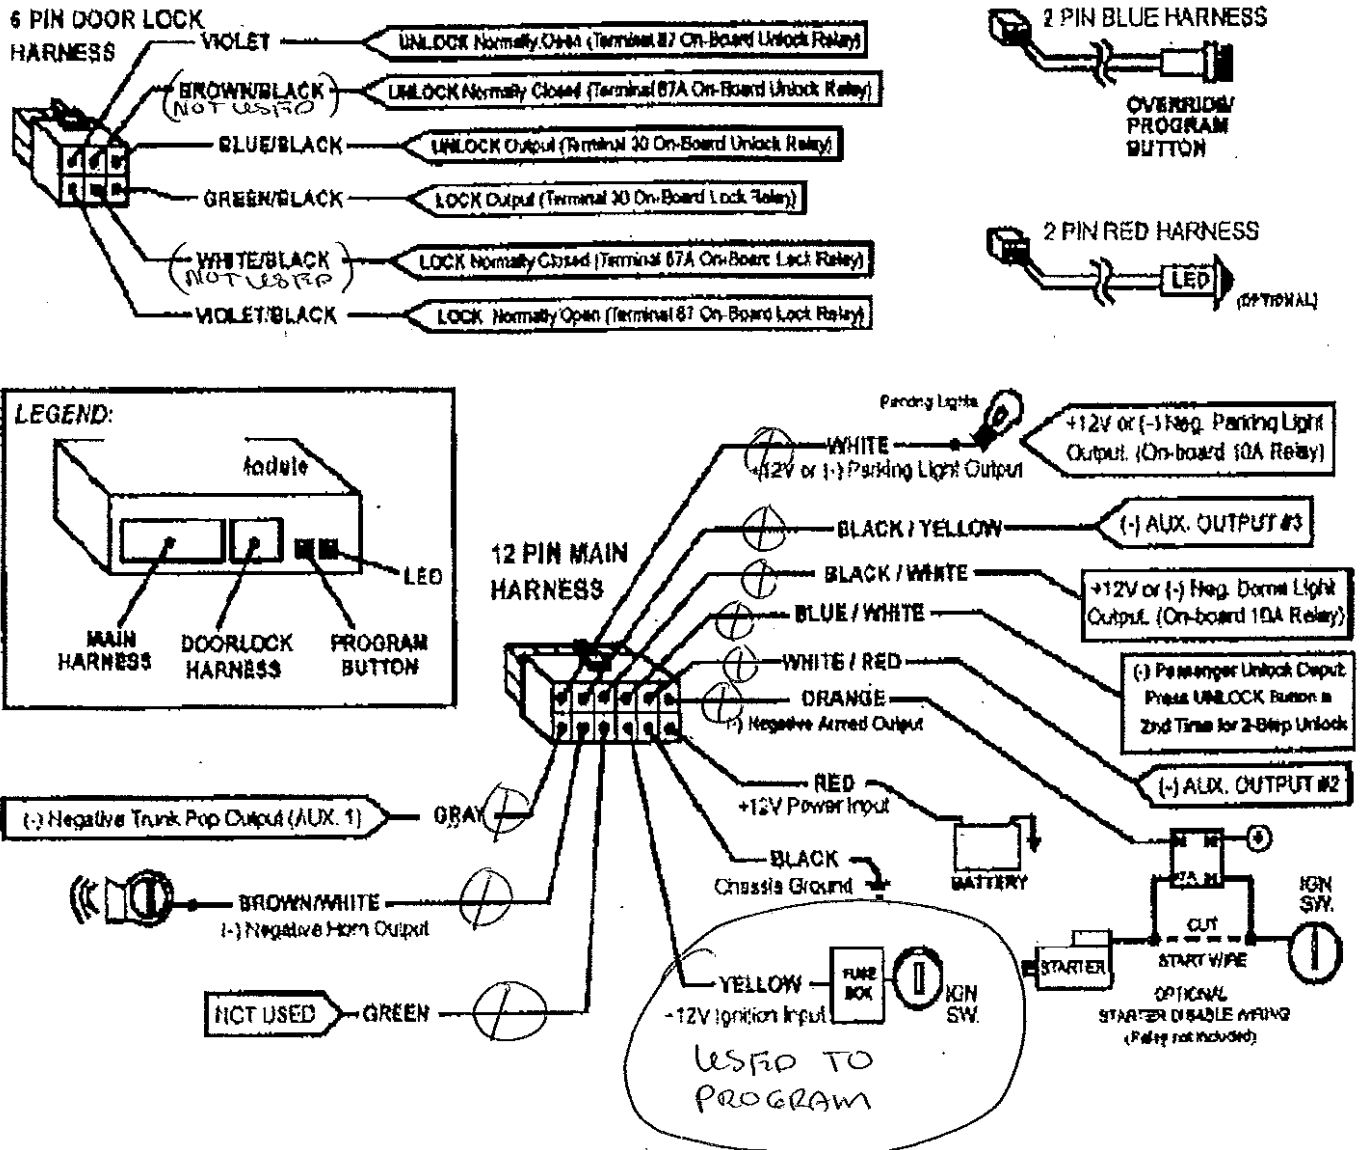

ON 12 PIN HARNESS, ONLY RED +12V POWER CONSTANT
 BLACK CHASSIS GROUND
 YELLOW USED TO PROGRAM
 THE REST OF WIRING
 IN MAIN HARNESS NOT
 USED