	ALTERNATOR FEED FUSE INFORMATION BULLETIN	IB-008 REV 1 2013-03-20
		Page 1 of 1

AMBULANCE TYPE: 628XX AND 629XX series

ISSUE

This bulletin is to inform Service Managers that service BC Ambulance fleet of Demers Ambulances that some units may experience charging issues on the OEM (GM) cluster. In some instances the alternator feed wire had received a voltage spike while starting the unit causing the existing fuse or manual reset breaker to trip. As a result the alternator does not sense correct voltage causing an error message in the OEM cluster.

ACTION

It was requested by BC Ambulance based on Demers recommendations of previous experience to have all alternator feed fuses or manual reset breakers be replaced with an auto-reset breaker. It is recommended; at the time of failure to replace either the fuse or the manual reset breaker with an auto-reset breaker as detailed in this bulletin.

If you have any questions, contact our Demers Customer Assistance Centre service department at following phone number 1-800-363-7591ext.282 and ask for Dominic Chatelle.


SERIE 628XX



Locate and remove the circuit breaker
on the red / black wire (F.ALT)

Install new supplied circuit breaker
(E307400)

FUSEBOX UNDER DRIVER SEAT

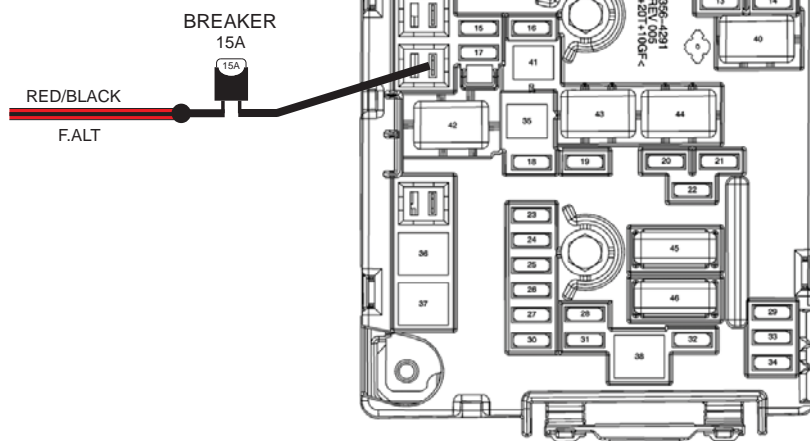

THE INFORMATION, TECHNICAL DATA AND STANDARDS DESCRIBED HEREIN ARE THE EXCLUSIVE PROPERTY OF DEMERS AMBULANCES AND/OR CONTAIN PROPRIETARY RIGHTS OF OTHERS AND ARE NOT TO BE USED OR DISCLOSED TO OTHERS WITHOUT THE WRITTEN AGREEMENT OF DEMERS AMBULANCES.



TITLE :

Alternator feed circuit breaker modification

DATE : 2013-03-13

DRAW. :

Y. DUBÉ

DRAWING :

00863

REV :

0

PAGE : 1/2

SERIE 629XX




Locate and remove the circuit breaker
on the red / black wire (F.ALT)

Install new supplied circuit breaker
(E307400)

LEFT KICK PANEL BLACK CONNECTOR

		D1	D2	D3	D4	D5	D6	D7	D8		
C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12
B1	B2	B3	B4	B5	B6	B7	B8	B9	B10	B11	B12
		A1	A2	A3	A4	A5	A6	A7	A8		

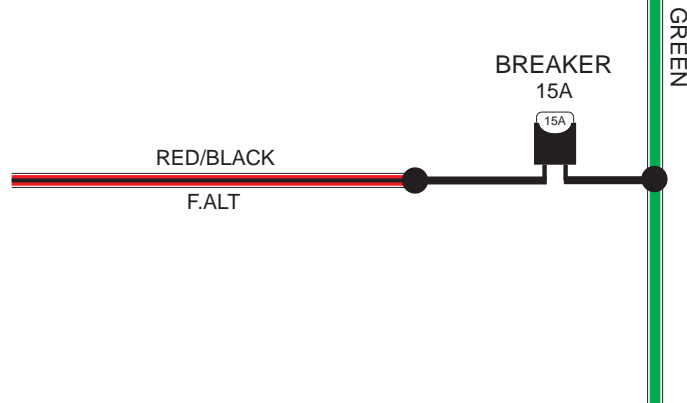

THE INFORMATION, TECHNICAL DATA AND STANDARDS
DESCRIBED HEREIN ARE THE EXCLUSIVE PROPERTY OF DEMERS
AMBULANCES AND/OR CONTAIN PROPRIETARY RIGHTS OF
OTHERS AND ARE NOT TO BE USED OR DISCLOSED TO OTHERS
WITHOUT THE WRITTEN AGREEMENT OF DEMERS AMBULANCES.



TITLE :
Alternator feed circuit breaker modification

DATE :
2013-03-13

DRAW. :
Y. DUBÉ

DRAWING :
00863

REV :
0
PAGE :
2/2