	<p style="text-align: center;">INTERSECTION LIGHTS SERVICE BULLETIN</p>	UP 124B REV 1 2016-02-25
		Page 1 of 1

AMBULANCE TYPE: MX151D

Units: 63030 to 63092, 63100 to 63164, 63200 to 63264

## ISSUE

This bulletin is to inform owners of Demers Ambulances (unit numbers listed above) that a modification of wiring harness is required. Front fender intersection lights are activated with the left/right flasher and with emergency lights. Modification will consist of removing left/right flasher feature but emergency lights feature will remain functional.

## ACTION

Modification of the wiring and reprogramming of the data recorder is required during the next scheduled 'A' service safety inspection. Please perform the modification as per the attach documentation.

## SERVICE PROCEDURE

Modification time: **0.5** hour / per vehicle.


Qty.	Description	Demers Part #
1	DATA RECORDER HARNESS	H030690
1 per service center	USB memory stick	E999003

### Please note:

With our new paperless warranty system no form is required to be filled out as these recalls are pre-approved for the time allotted, please fax your invoice to Demers Customer Assistance Centre service department at: 1-306-373-4144.

\*Please be sure to indicate the service bulletin number on the invoice.

Should you require additional time or have questions please call our Demers Customer Service Centre toll free at **1-855-373-9789**.

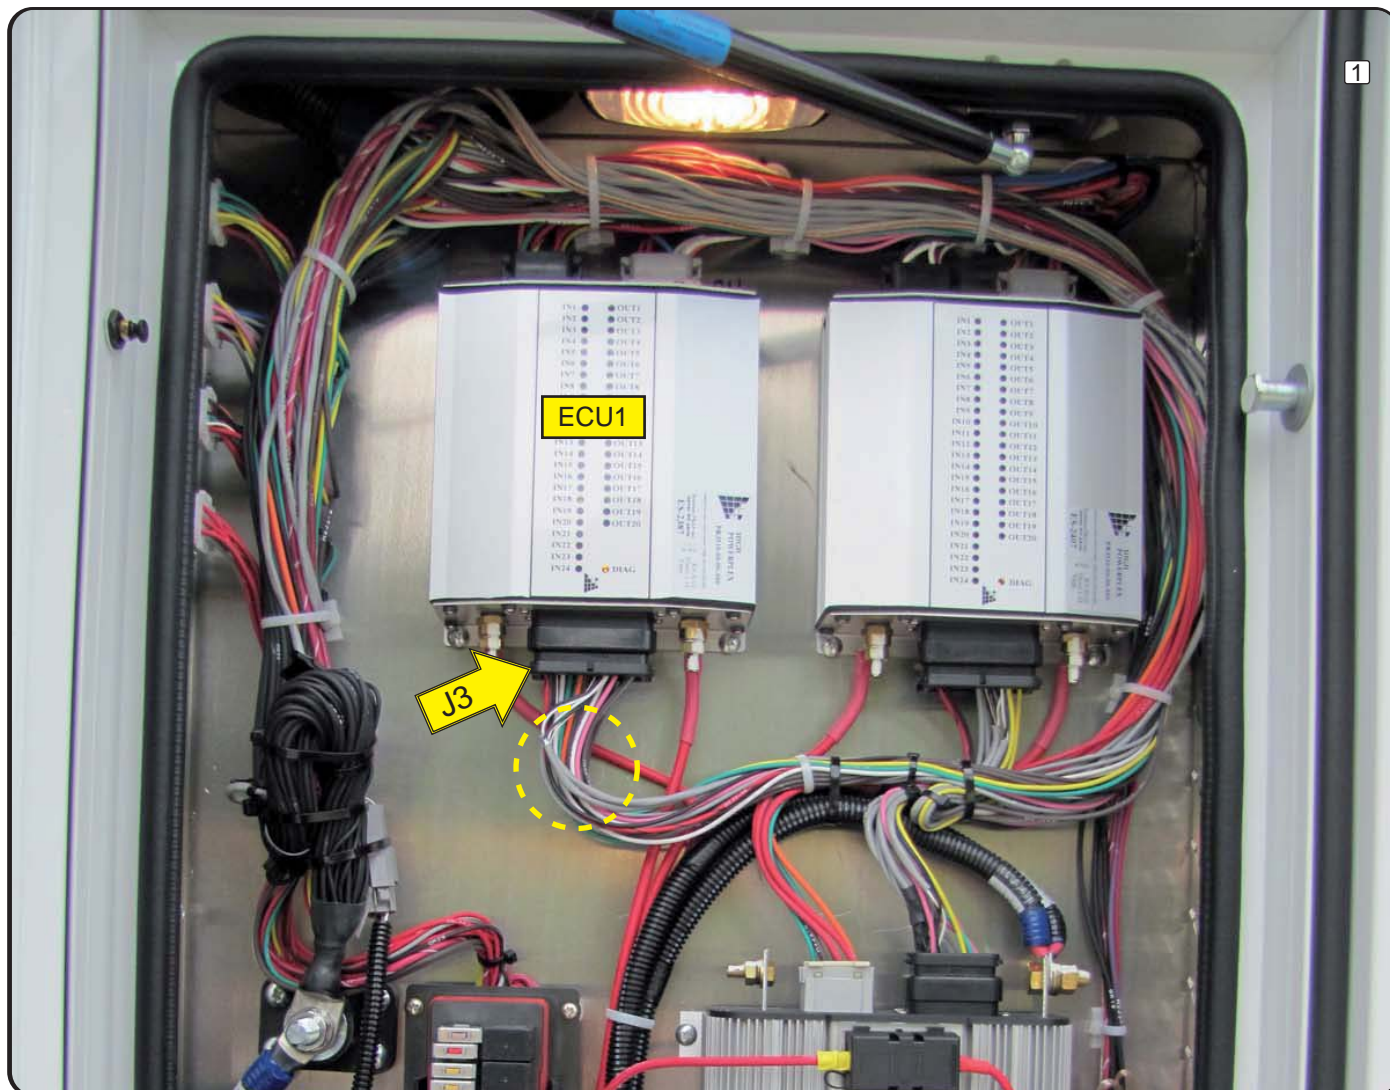

This modification is for unit number **63030 to 63092**  
**63100 to 63164**  
**63200 to 63264**

- 1 - Locate connector J3 on module ECU-1.
- 2 - Remove connector J3 and locate pin 7 - left flasher / pin 8 - right flasher (see diagrams on page 2)
- 3 - Cut and insulate wires at both ends on pins 7 & 8 (yellow & green wires)
- 4 - Reinstall connector J3 on module ECU-1.

THE INFORMATION, TECHNICAL DATA AND STANDARDS DESCRIBED HEREIN ARE THE EXCLUSIVE PROPERTY OF DEMERS AMBULANCES AND/OR CONTAIN PROPRIETARY RIGHTS OF OTHERS AND ARE NOT TO BE USED OR DISCLOSED TO OTHERS WITHOUT THE WRITTEN AGREEMENT OF DEMERS AMBULANCES.



TITLE : INTERSECTION LIGHT « STEADY-BURN » DEACTIVATION FEATURE (UNIT 63030 TO 63092, 63100 TO 63164, 63200 TO 63264)			
DATE : 2016-04-13	DRAW. : Y. DUBÉ	# DRAWING : # 00995	REV : 1
# ASS :			PAGE : 1/6

Diagram 1.0


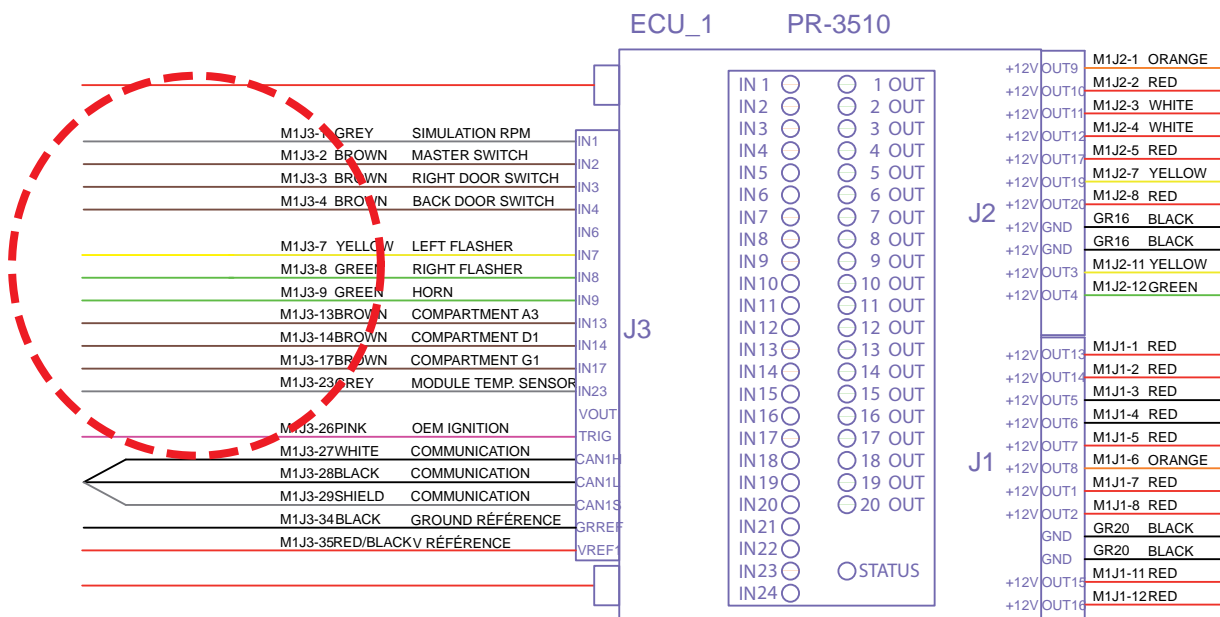
BEFORE MODIFICATION

Diagram 2.0

AFTER MODIFICATION

THE INFORMATION, TECHNICAL DATA AND STANDARDS DESCRIBED HEREIN ARE THE EXCLUSIVE PROPERTY OF DEMERS AMBULANCES AND/OR CONTAIN PROPRIETARY RIGHTS OF OTHERS AND ARE NOT TO BE USED OR DISCLOSED TO OTHERS WITHOUT THE WRITTEN AGREEMENT OF DEMERS AMBULANCES.

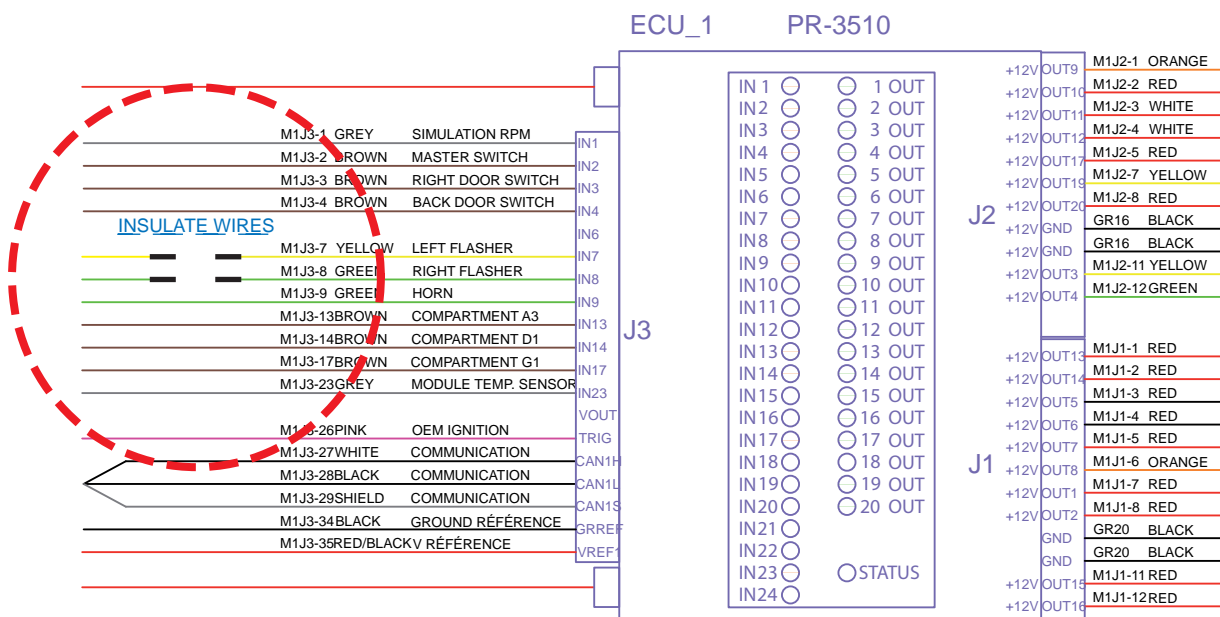

TITLE : INTERSECTION LIGHT « STEADY-BURN »  
DEACTIVATION FEATURE  
(UNIT 63030 TO 63092, 63100 TO 63164, 63200 TO 63264)

DATE : 2016-04-13

DRAW. : Y. DUBÉ

# DRAWING : # 00995

REV : 1

# ASS :

PAGE : 2/6



5 - Use supplied wires (H030690) to run from round datalogger plug to touch screen connector.  
(Terminals are different, route them as follows on picture #2)

6 - For the round datalogger plug (Diagram 3.0)

- Connect yellow wire to pin 2
- Connect green wire to pin 3

- For the touch screen connector (Diagram 3.0)

- Connect yellow wire to pin 1 (if there is a wire already, remove it)
- Connect green wire to pin 2

TOUCH SCREEN CONNECTOR



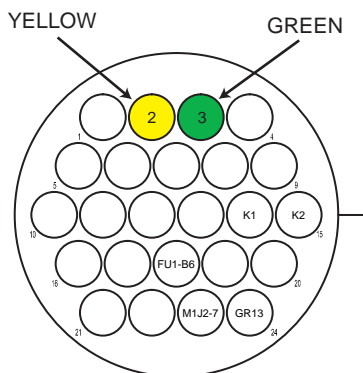


Diagram 3.0

ROUND DATALOGGER CONNECTOR

GREEN

YELLOW

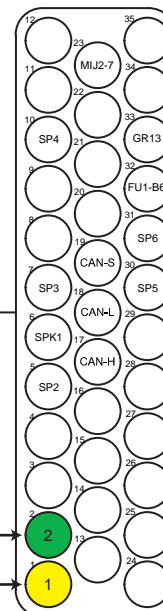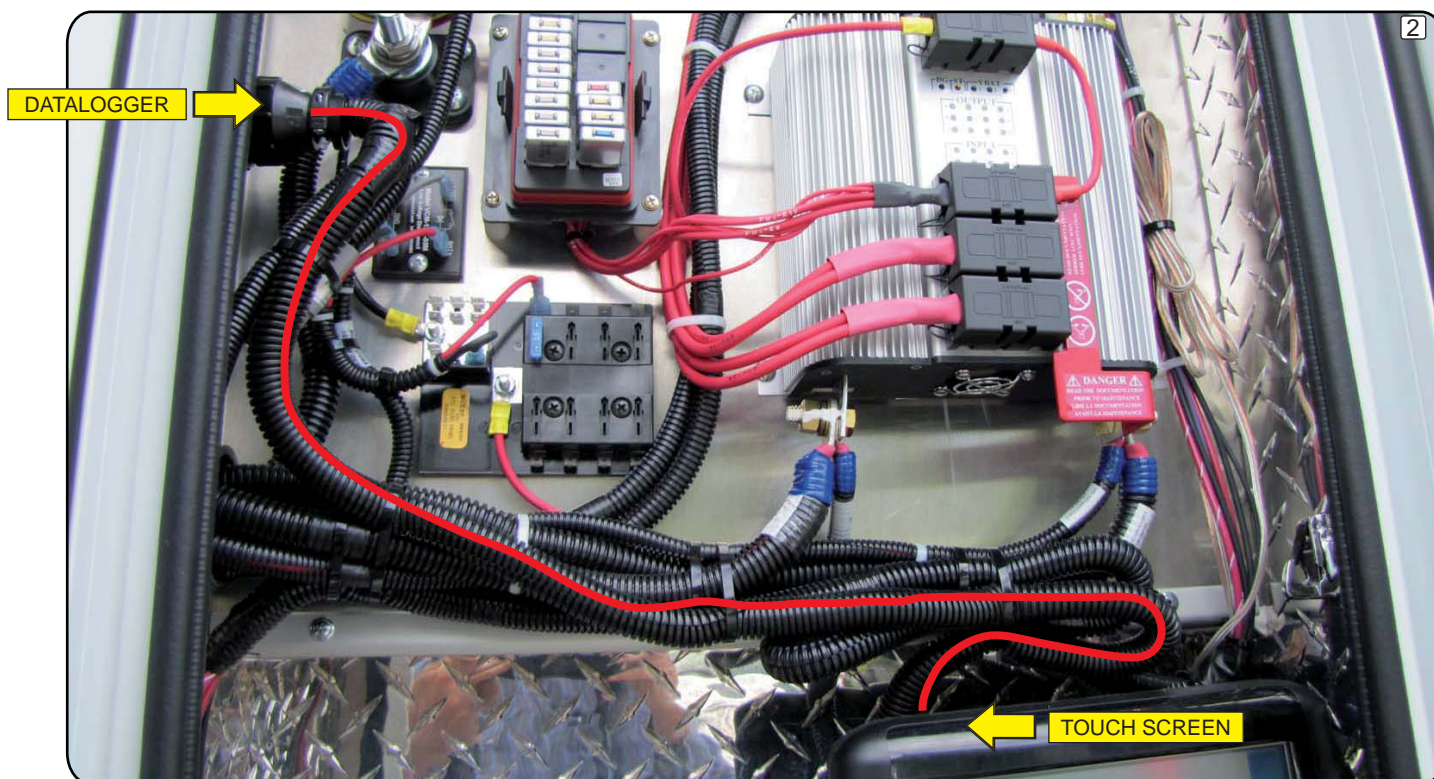

Secure the new harness with tie wrap.

THE INFORMATION, TECHNICAL DATA AND STANDARDS DESCRIBED HEREIN ARE THE EXCLUSIVE PROPERTY OF DEMERS AMBULANCES AND/OR CONTAIN PROPRIETARY RIGHTS OF OTHERS AND ARE NOT TO BE USED OR DISCLOSED TO OTHERS WITHOUT THE WRITTEN AGREEMENT OF DEMERS AMBULANCES.



TITLE : INTERSECTION LIGHT « STEADY-BURN »  
DEACTIVATION FEATURE  
(UNIT 63030 TO 63092, 63100 TO 63164, 63200 TO 63264)

DATE : 2016-04-13

# ASS :

DRAW. :

Y. DUBÉ

# DRAWING :

# 00995

REV :

1


PAGE : 3/6




Start vehicle to turn on screen.  
Insert supplied usb key.




Click on the [MAIN MENU](#) icon

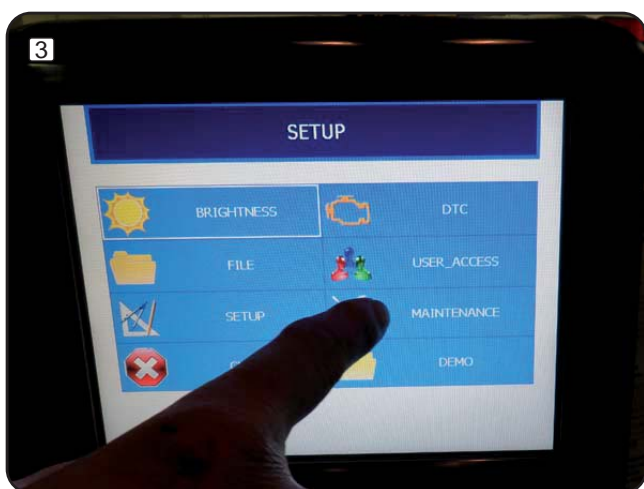


Click on the [MAINTENANCE](#) icon

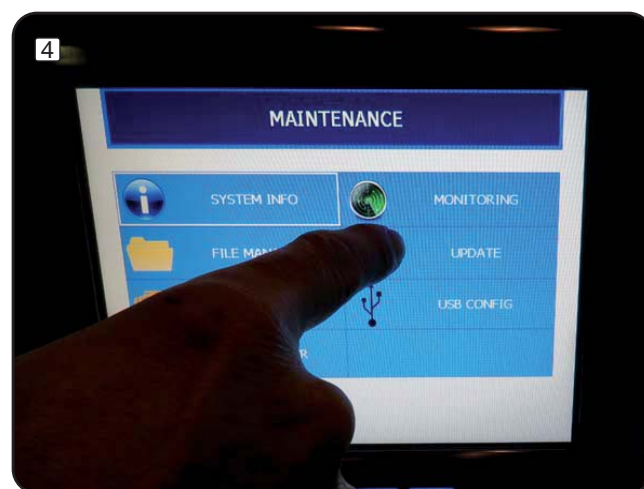

Click on the [UPDATE](#) icon

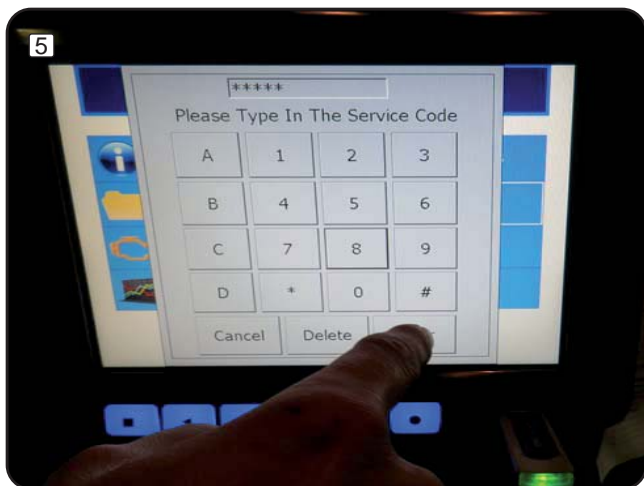

Enter the password ([Password is 1234](#))

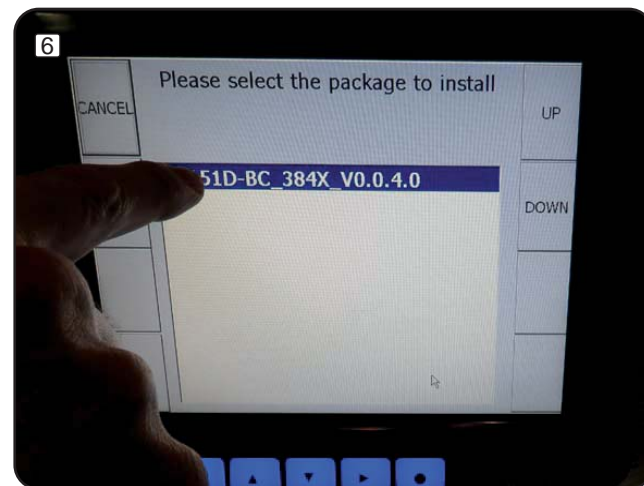


Select package [MX151D-BC\\_384X\\_V0.0.4.0](#)

THE INFORMATION, TECHNICAL DATA AND STANDARDS DESCRIBED HEREIN ARE THE EXCLUSIVE PROPERTY OF DEMERS AMBULANCES AND/OR CONTAIN PROPRIETARY RIGHTS OF OTHERS AND ARE NOT TO BE USED OR DISCLOSED TO OTHERS WITHOUT THE WRITTEN AGREEMENT OF DEMERS AMBULANCES.




TITLE : INTERSECTION LIGHT « STEADY-BURN » DEACTIVATION FEATURE (UNIT 63030 TO 63092, 63100 TO 63164, 63200 TO 63264)			
DATE : 2016-04-13	DRAW. : Y. DUBÉ	# DRAWING : # 00995	REV : 1
# ASS :			PAGE : 4/6




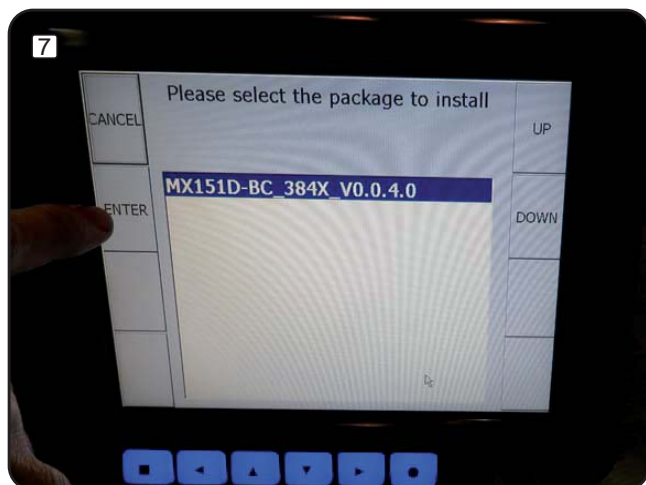


Click on the [ENTER](#) icon.

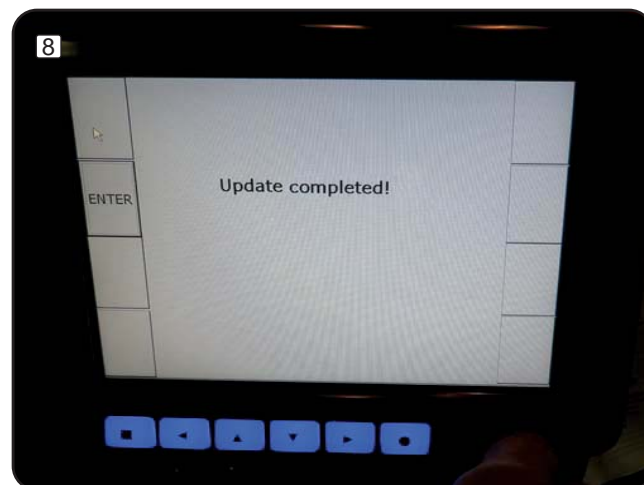


[Wait for confirmation message](#) before proceeding to next step.

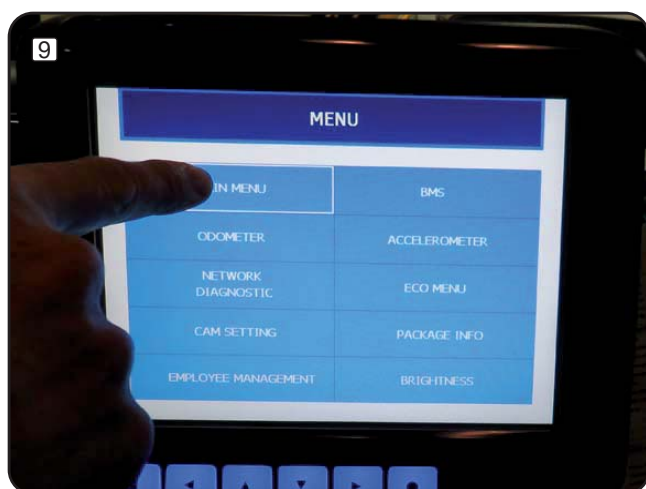

Click on the [MAIN MENU](#) icon.

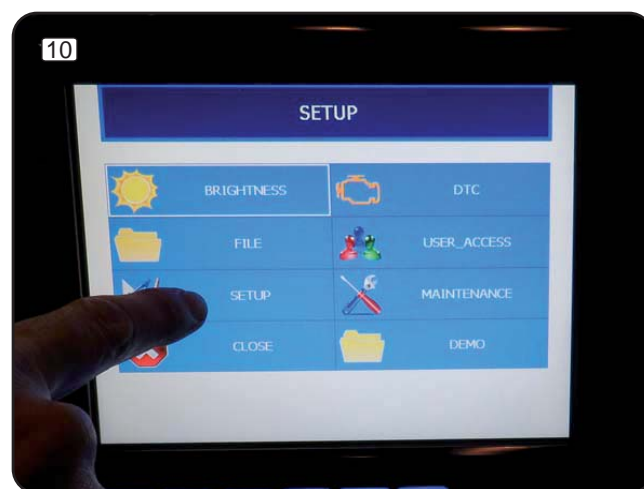


Click on the [SETUP](#) icon.

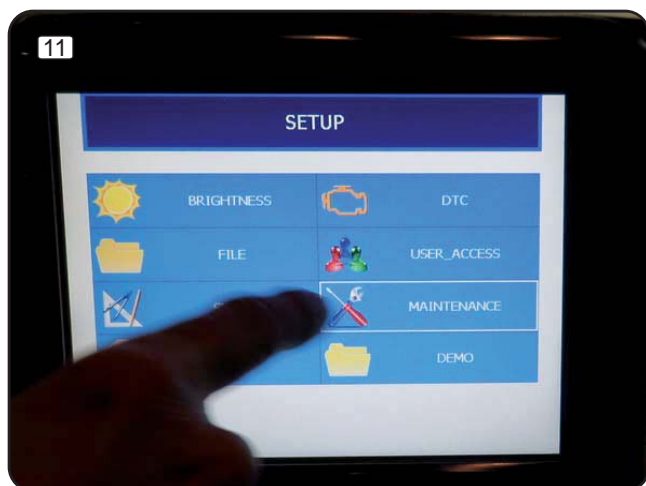


Click on the [MAINTENANCE](#) icon.




Click on the [DATALOGGER](#) icon.

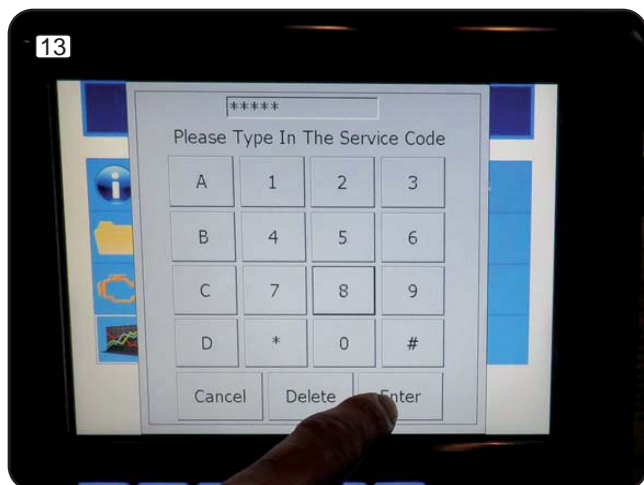


Re-enter the password ([Password is 1234](#))

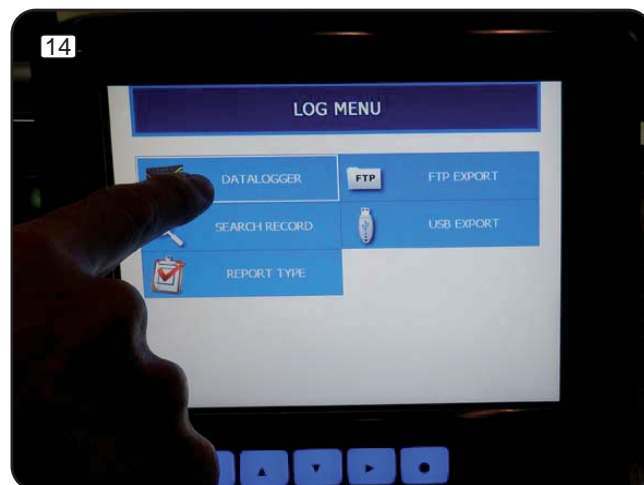

Click on the [DATALOGGER](#) icon.

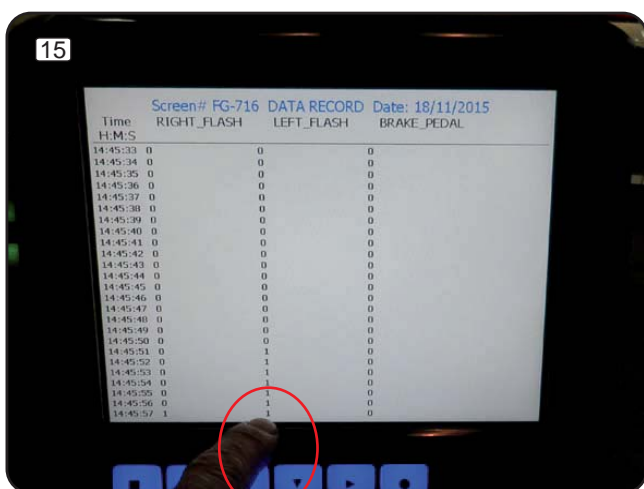

Turn on left flashing and check if it is registering with a one on datalogger screen under "LEFT\_FLASH"

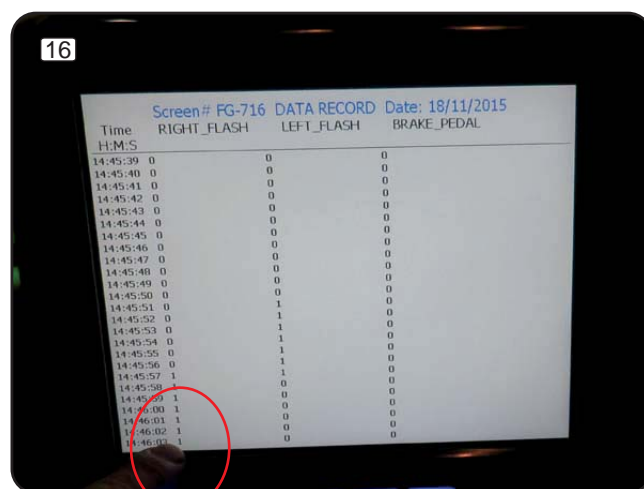

Turn on right flashing and check if it is registering with a one on datalogger screen under "RIGHT\_FLASH"



Check if right and left flasher are working properly on side and rear of the ambulance.



Check if right and left flasher are working properly on side and rear of the ambulance.

THE INFORMATION, TECHNICAL DATA AND STANDARDS DESCRIBED HEREIN ARE THE EXCLUSIVE PROPERTY OF DEMERS AMBULANCES AND/OR CONTAIN PROPRIETARY RIGHTS OF OTHERS AND ARE NOT TO BE USED OR DISCLOSED TO OTHERS WITHOUT THE WRITTEN AGREEMENT OF DEMERS AMBULANCES.



TITLE : INTERSECTION LIGHT « STEADY-BURN » DEACTIVATION FEATURE (UNIT 63030 TO 63092, 63100 TO 63164, 63200 TO 63264)			
DATE : 2016-04-13	DRAW. : Y. DUBÉ	# DRAWING : # 00995	REV : 1
# ASS :			PAGE : 6/6