

	AVENGER DASH LIGHT FOAM SERVICE BULLETIN	UP 070 REV 0 2010-12-08
		Page 1 of 1

AMBULANCE TYPE: MX151D 2009

ISSUE

This bulletin is to inform owners of Demers Ambulances that a replacement of the Foam around the avenger dash light is required. The foam does not stick properly on the light creating reflection light into the windshield.

ACTION

Replacement of the foam is required at the next scheduled 'A' service safety inspection.

Perform replacement as per the attached documentation.

SERVICE PROCEDURE


Installation time: 0.2 hour / per vehicle.

Qty.	Description	Demers Part #
15 Inches	Gasket foam	E204059

Complete a Warranty form & order components on the specified sheet. Forward order to the Demers Customer Assistance Centre service department by fax at: 1-306-373-4144, by email at: parts@advancedresponsevehicles.com or by phone at: 1-877-373-4464. If you have any questions, contact our Demers Customer Assistance Centre service department at following phone number 1-877-373-4464 and ask for John-Paul Thauberger.

You may also contact our authorized Demers Service Dealer (Knight Hill Automotive) by fax at: 1-604-273-1848, by email at: contact@knighthill.com or by phone number at: 1-888-546-8333.

- 1 - Remove Avenger light on the windshield.
- 2 - Clean the surface (windshield).
- 3 - Remove the Neoprene (sealing joint) on the Avenger light and clean the surface.

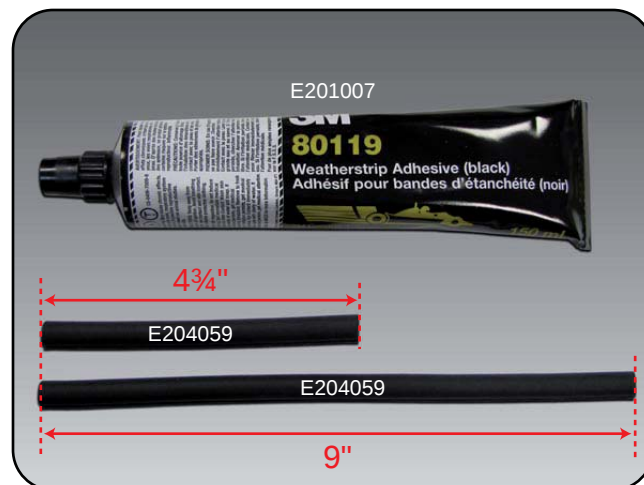

- 4 - Make sure you have the needed item :
Weatherstrip Adhesive (not supplied)
Sealing joint (supplied)



- 5 - Apply adhesive as shown.
Let Dry 10 Minutes



- 6 - Install sealing joint all around as shown.



- 7 - Apply adhesive in corners.
Let dry 10 minutes
- 8 - Then press two joint strips together.



- 9 - The modification is done
Let dry 30 minutes
- 10 - Reinstall the Avenger light in the vehicle.

THE INFORMATION, TECHNICAL DATA AND STANDARDS DESCRIBED HEREIN ARE THE EXCLUSIVE PROPERTY OF DEMERS AMBULANCES AND/OR CONTAIN PROPRIETARY RIGHTS OF OTHERS AND ARE NOT TO BE USED OR DISCLOSED TO OTHERS WITHOUT THE WRITTEN AGREEMENT OF DEMERS AMBULANCES.



TITLE : DASH AVENGER LIGHT MODIFICATION			
DATE : 2010-12-14	DRAW. : Y. DUBÉ B. LANDRY	# DRAWING : # 00690	REV : 0
# ASS :			PAGE : 1/1



Formulaire de réclamation de garantie
Warranty claim form

AQ-F-SC.3 rev.0

Page 1 de 1

1	Numéro de série du véhicule (Coin gauche tableau de bord) Vehicle serial number (V.I.N) (Number on dash, driver's side)	
---	--	--

2	Numéro d'unité de la flotte Fleet unit number		3	Demers numéro Stock Demers stock number	
---	--	--	---	--	--

4	Date de mise en service (AA/MM/JJ) Date in service (YY/MM/DD)		5	Kilomètres / kilometres Milles / Miles	
---	--	--	---	---	--

6	Date du bris (AA/MM/JJ) Date of failure (YY/MM/DD)		7	Date de la demande garantie Date of warranty claim	
---	---	--	---	---	--

8	Description du problème / Description of the problem

9	Cause(s) du problème / Cause(s) of the problem

10	Action(s) corrective(s) / Corrective(s) action(s)

11	Temps évalué pour la réparation Time evaluated for repair	
----	--	--

12	Demande de réclamation faite par Claim requested by		13	N° facture Invoice N°	
----	--	--	----	--------------------------	--

14	Adresse de facturation / Billing address
Tél. / Phone:	

15	Adresse de livraison / Shipping address
Tél. / Phone:	

N° pièces / Part N°	QTY	DESCRIPTION

SÉCTION RÉSERVÉE DEMERS RESERVED SECTION

- No. d'autorisation de garantie / Warranty claim authorization no. :
- Temps alloué pour la réparation / Time allowed for repairs :
- Date d'autorisation de garantie / Warranty claim authorization date :